
Heater disconnection warning machine



FAL-100-1 < for single phase >



FAL-100-3P/Z < for three-phase >

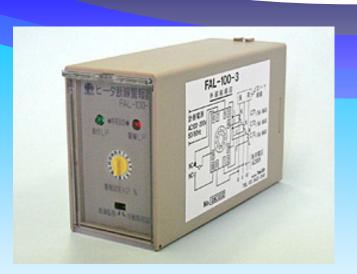

- ·Goods for RoHS
- ·Automatic load setting by microcomputer
- ·The alarm setting is a digital method.
- ·Installation type in board by plug IN method
- ·Simplification of setting and handling

FAL-100-1


Specification


Meter power supply	Within AC100V-220V±10%
Heater capacity	1.0KW or less connecting directly in case of AC100V and 0.5KW
	and AC200V(5A or less in load current), External CT and union
	combination when this capacity is exceeded Please use.
Range of load setting	It sets it an automatic load by 1-5A.
Range of warning setting	It sets it at $0-30\%$ (warning setting value $0-15\times2$) current decrease rate.
Power supply frequency	50/60Hz
Load setting accuracy	±3%
Warning setting accuracy	±3%
Detection input	Load current and load voltage
Alarm output	Relay point of contact 1ab(ratings 200V1A resistance load)
Category temperature range	0~50°C
Operating humidity limits	90%RH or less(No do be dewy.)
Installation method	Base socketinstallation type plug-in type (optional in board · · ·
	Omron 11PFA equivalent goods)
Insulation resistance	500VDC 50M Ω or more between each I/O terminals
Withstand voltage	1500VAC 1 minute between each I/O terminals
Weight	300g

FAL-100-3P/Z

Specification


·FAL-100-3P · · · Phase control method
·FAL-100-3Z · · · 0 crossing and SSR control methods
Within AC100V-220V±10%
5A or less in line current is assumed to be directly connected, and
5A or more is combined with external CT.Please use.
It sets it an automatic load by 1-5A.
It sets it at $0-30\%$ (warning setting value $0-15\times2$) current decrease rate.
50/60Hz
±3%
±3%
Load current and load voltage
Relay point of contact 1ab(ratings 200V1A resistance load)
0~50°C
90%RH or less(No do be dewy.)
Base socketinstallation type plug-in type (optional in board · · ·
Omron 11PFA equivalent goods)
500 VDC 50 M Ω or more between each I/O terminals
1500VAC 1 minute between each I/O terminals
350g

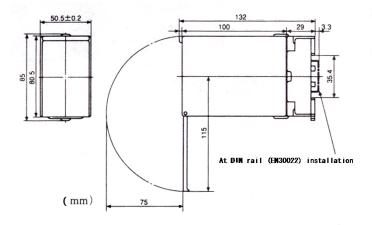

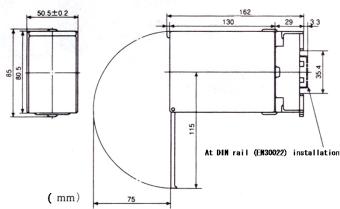


FAL-100-1Example of external connecting wires


AC100V 0.5kW brace In the following cases AC200V 1.0kW brace

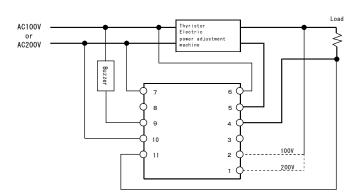

AC100V 0.5kW $\bigg\}$ In case of the above-mentioned AC200V 1.0kW $\bigg\}$

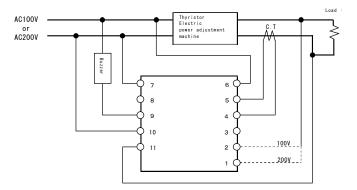

FAL-100-3Example of external connecting wires

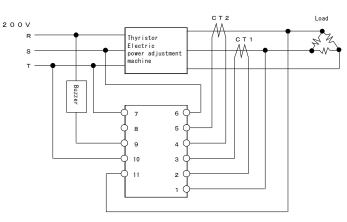

*External C.T is useless for 5A or less the line current Please connect the line of R phase and S phase with the base socket in the series.

Business line

Automatic temperature control meter

Various temperature detection edges


Direct-current ampere-hour meter

Direct-current ampere-hour meter by microcomputer control

Thyristor power controller

Heater disconnection alarm

In addition, electronic application apparatus

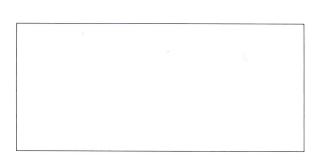



Forest Co., Ltd.

Head Office

Shimouma 4-14-15, Setagaya-ku, Tokyo 154-0002, Japan

Telephone : +81 3 3421 5141 Fax : +81 3 3421 5145

Yamanashi Fuji Plant

Shibokusa, Oshino-mura, Minami-Tsuru, Yamanashi

401-0511, Japan

Telephone : +81 555 84 2503 Fax : +81 555 84 3157

homepage http://www.forest-ele.co.jp/

Caution in using

- Since this product is not manufactured for the applications stipulated in the Export Trade Control Ordinance, it cannot be used for the purpose of weapons of mass destruction.
- The final application and final customer must be checked so that it will not be used for weapons of mass destruction (military application, military equipment). Due attention must also be paid to the re-sale so that it will not be illegally exported.

09.05001A L